

PEC Saver user manual

The PEC Saver is an innovative and easy-to-use product that allows you to store your PEC configuration and settings.


The PEC Saver stores a complete copy of all a PEC's configuration and settings. You can restore the configuration and settings any time, or even use them to set up new PECs in seconds!

Features

- ◆ Quick and easy to use
- ◆ Portable, reliable, and safe storage of configuration and settings
- ◆ Transferable to any PEC that has the same firmware version
- ◆ Compact design—fits in a pocket
- ◆ 90-day limited warranty


To save your settings

1. Loosen the four screws in the PEC enclosure and then gently remove the cover. Make sure not to disconnect the ribbon cable.
2. Insert the PEC Saver into the connector marked SAVER on the inside top-left of the cover.
3. Press **Program** until **CONF** displays and then press **Select**. The display shows **24**, the first item in the Configuration menu.
4. Press **Down** until **34** displays and then press **Select**.
5. Press **Up** or **Down** to change the **no** to **YES** and then press **Select**. The control saves the information to the PEC Saver. When complete, the display shows **done**.
6. To return to the Configuration menu, press **Back** once. To return to the Main menu, press **Back** twice. To return to the Main display, press **Back** three times.
7. Remove the PEC Saver.
8. Replace the cover and then tighten the four screws.

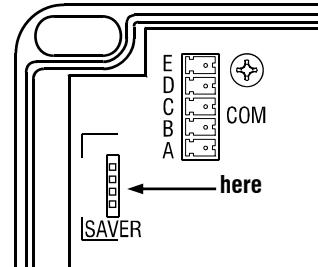

To restore your settings

1. Loosen the four screws in the PEC enclosure and then gently remove the cover. Make sure not to disconnect the ribbon cable.
2. Insert the PEC Saver into the connector marked SAVER on the inside top-left of the cover.
3. Press **Program** until **CONF** displays and then press **Select**. The display shows **24**, the first item in the Configuration menu.
4. Press **Down** until **35** displays and then press **Select**.
5. Press **Up** or **Down** to change the **no** to **YES** and then press **Select**. The control reads the information from the PEC Saver. When complete, the display shows **done**.
6. To return to the Configuration menu, press **Back** once. To return to the Main menu, press **Back** twice. To return to the Main display, press **Back** three times.
7. Remove the PEC Saver.
8. Replace the cover and then tighten the four screws.

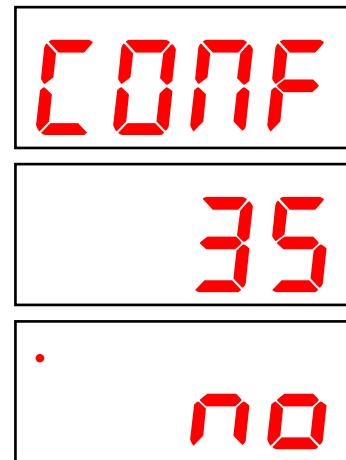**Phason Inc.**

2 Terracon Place

Winnipeg, Manitoba, Canada
R2J 4G7Phone: 204-233-1400
Fax: 204-233-3252E-mail: support@phason.ca
Web site: www.phason.ca