

Replacement Parts

ITEM #	PART #	DESCRIPTION
1	CE057	INDICATOR LIGHT
2	CE201	IGNITION MODULE- MODELS
3	CG056	GAS VALVE REPLACEMENT KIT - NAT.
	CG070	GAS VALVE REPLACEMENT KIT - LPG.
4	CE058	TRANSFORMER
5	CE004	BLOWER - 40,000 TO 80,000 BTU
	CE013	BLOWER - 100,000 BTU (After S/N 166880)
	CE282	BLOWER KIT - 100,000 BTU (INCLUDES AIR SWITCH AND AIR PLATE) BEFORE S/N 166881 (NOV. 2015) WITH ORIGINAL FACTORY BLOWER
6	CH007	BLOWER GASKET
7	LE002	FLAME SENSOR ELECTRODE
8	LE001	SPARK ELECTRODE

ITEM #	PART #	DESCRIPTION
9	CE006	IGNITION WIRE
10	LG004	BURNER CUP
	LG005	BURNER CUP ASSEMBLY (C/W ELECTRODES)
11	CH011	SIGHT GLASS ASSEMBLY
12	CE025	AIR SWITCH – L SERIES - 60
	CE025	AIR SWITCH – L SERIES - 80
	CE025	AIR SWITCH - L SERIES – 100(After S/N 166880)
	CE142	AIR SWITCH - L SERIES 100,000 BTU BEFORE S/N 166881 (NOV. 2015) WITH ORIGINAL FACTORY BLOWER
13	CH001	BURNER GASKET
14	VS022	AIR INLET KIT

