


Instructions for Attaching the ¼" Waterer Adapter to Bucket

1. Drill ½" hole in bucket
2. Place SS Washer and Rubber Seal on the threaded end of the Barb
3. Place threaded end through the bucket and attach the Nylon Nut

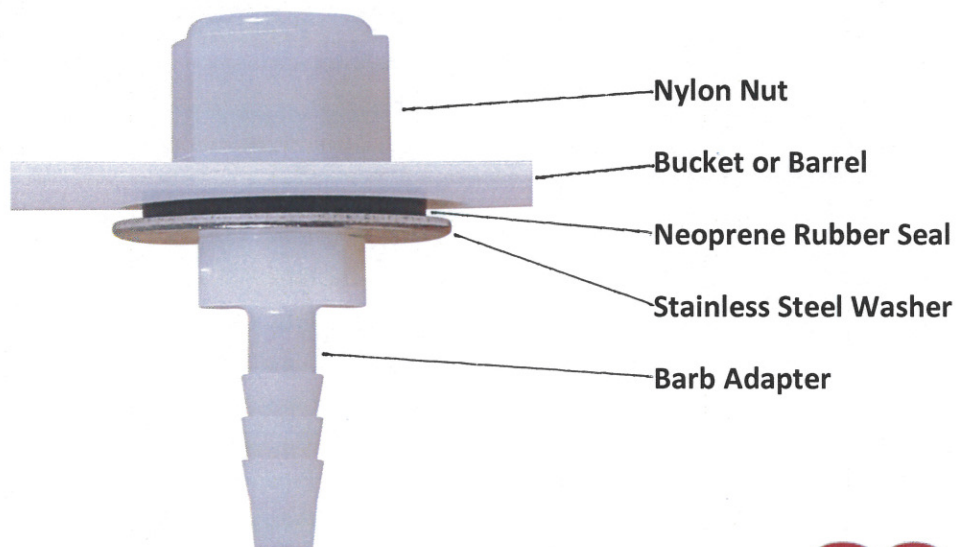

QC SUPPLY

800-433-6340

www.qcsupply.com