



DOUBLE L GROUP LLC


# RD1200 GRAVITY INSULATED ATTIC AIR INLET

## Installation Instructions

**RD1200 RAYDOT  
GRAVITY KIT:  
#090813CH**

### RD1200 GRAVITY INLET PARTS

DESCRIPTION	PART NO.	QTY.
A Bolt 1/4" x 2"		4
B Bent Washer 1" Flat		4
C Flat Washer 1" Flat		4
D Hex Nut 1/4"		4
E Weight Rod	090857RD	2
F 1 lb. Weight	90832	2
G Rubber Grommet	090849BE	4
H Swivel Arm	090837BE	2
I Plastic Shoulder Wash	090838BE	2
J #10 x 1 1/2" Screw	910007SC	4
K Lid with Hinge	090852DL	
L Hinge Only	090843BE	
M 2-Stage Shutoff w/Screw	90831	2

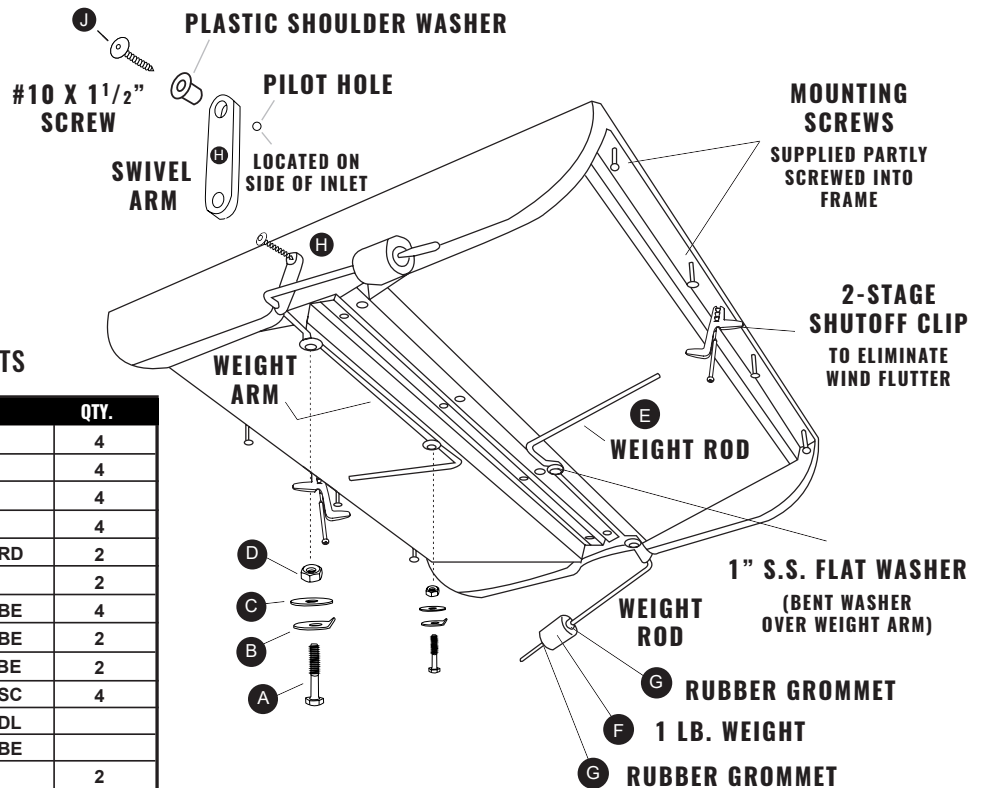

## INSTALLATION INSTRUCTIONS

- Fasten inlet to the ceiling with 8 - #10 x 1 1/2" stainless steel screws provided. (The inlet must be fastened squarely to ensure door opens freely. The doors can be adjusted by loosening the hinge screws and repositioning the door.)
- Fasten weight arm to bottom of hinge using 2 - 1/4" x 2" stainless steel bolts, 2 - 1" stainless steel flat washers, 2 - 1" stainless steel bent washers, & 2 - 1/4" stainless steel head nuts.
- Slide the nylon swivel arm over the end of the weight arm and attach to the side of the inlet (locate pilot hole), using a #10 x 1 1/2" stainless steel screw. (Note: exploded view above showing where the shoulder washer is located).
- Slide a rubber grommet over the end of the weight arm, followed by the 1 lb. weight and then a second rubber grommet. Adjust to desired location.
- With door closed, fasten 2-Stage Shutoff clip (locate pilot hole) using a #10 x 2 1/2" screw with a #10 x 3" or longer driver bit.



**Have technical questions?**  
Contact Dick Streicher at  
1-563-875-6257 or 1-800-553-4102

(563) 875-6257 or 1-800-553-4102

**www.doublel.com**

**www.youtube.com/doublelgroup**