



DOUBLE L GROUP LLC


# JD2600 GRAVITY INSULATED ATTIC AIR INLET

## Installation Instructions

**JD2600 GRAVITY KIT:  
#090811CH**

### JD2600 GRAVITY INLET PARTS

	DESCRIPTION	PART NO.	QTY.
A	Bolt 1/4" x 2"		4
B	Bent Washer 1" Flat		4
C	Flat Washer 1" Flat		4
D	Hex Nut 1/4"		4
E	Weight Rod	090847BE	2
F	1 lb. Weight	90833	2
G	Rubber Grommet	090849BE	4
H	Swivel Arm	090837BE	2
I	Plastic Shoulder Washer	090838BE	2
J	#10 x 1 1/2" Screw	910007SC	4
K	Lid with Hinge	090845BE	
L	Hinge Only	090846BE	
M	2-Stage Shutoff w/screw	90831	2

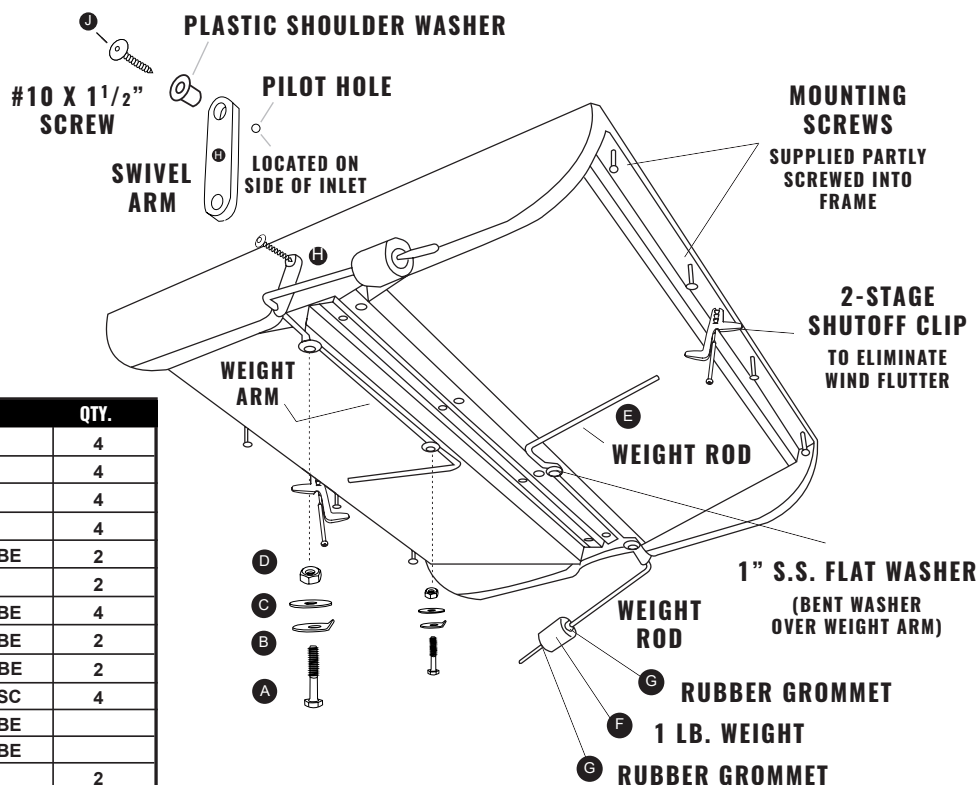

## INSTALLATION INSTRUCTIONS

- Fasten inlet to the ceiling with 8 - #10 x 1 1/2" stainless steel screws provided. (The inlet must be fastened squarely to ensure door opens freely. The doors can be adjusted by loosening the hinge screws and repositioning the door.)
- Fasten weight arm to bottom of hinge using 2 - 1/4" x 2" stainless steel bolts, 2 - 1" stainless steel flat washers, 2 - 1" stainless steel bent washers, & 2 - 1/4" stainless steel head nuts.
- Slide the nylon swivel arm over the end of the weight arm and attach to the side of the inlet (locate pilot hole), using a #10 x 1 1/2" stainless steel screw. (Note exploded view above showing where the shoulder washer is located).
- Slide a rubber grommet over the end of the weight arm, followed by the 1 lb. weight and then a second rubber grommet. Adjust to desired location.
- With door closed, fasten 2-Stage Shutoff clip (locate pilot hole) using a #10 x 2 1/2" screw with a #10 x 3" or longer driver bit.



**Have technical questions?**  
**Contact Dick Streicher at**  
**1-563-875-6257 or 1-800-553-4102**

**(563) 875-6257 or 1-800-553-4102**  
**[www.doublel.com](http://www.doublel.com)**  
**[www.youtube.com/doublelgroup](http://www.youtube.com/doublelgroup)**