




INSTALLATION INSTRUCTIONS
FOR THERMALARM'S TH-NC
NORMALLY CLOSED ALARM
THERMOMETER

THERMALARM's TH-NC was designed for use in a normally closed alarm system. When any condition interrupts the closed circuit, (power failure, broken wire, or temperature problem sensed by a TH-NC) continuity of the sensing circuit will be interrupted, activating the alarm system.

As with any instrument or alarm, this device must be kept free of accumulation of dust and debris, and routine testing of the system is essential.

The THERMALARM TH-NC should be mounted to a rigid surface using three no. 6 screws through the mounting tabs provided. Alarm circuit connections should be made using the schematic diagram below. Note that the terminals marked +IN and +OUT connect the switching circuit of the TH-NC into the alarm circuit. The -COMMON terminal is provided only as a junction for the return side of the circuit in this model and may or may not be used. It is recommended that terminal lugs be used for all connections.

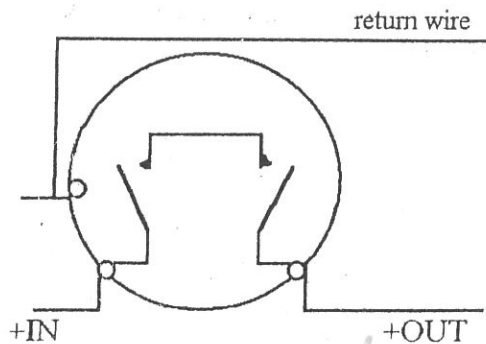

(For diagram purposes switches are shown in their open state).

To adjust the high and low limits, simply move the pointers at the bottom of the TH-NC case until the limit hands indicate the desired alarm activation temperatures. Always make sure that the temperature indicating hand (bright orange hand) is located between the two limit hands.

THERMALARM's Customer Service Department is available Mon. through Fri., 9:00AM to 5:00 PM (Eastern time) to assist you or answer your questions concerning your alarm system. Call: 1 (603) 539-3444

WARRANTY

THERMALARM TH-NC is warranted to be free from defects in materials and workmanship for a period of one year from date of manufacture. should a TH-NC be found to be defective during this period, please return it to the dealer where it was purchased for replacement or repair at THERMALARM'S discretion.

Since THERMALARM PRODUCTS, INC. cannot be responsible for the integrity of system wiring, connections, batteries, environment or application of this unit, our warranty is strictly limited to repair or replacement as specified above. No other warranty is intended or implied.

THERMALARM PRODUCTS, INC.

P.O. Box 459, 93 Bonnyman Rd
East Wakefield, NH 03830
(603) 522-5301 Fax: (603) 522-5302
WWW.THERMALARM.COM