




DOUBLE L GROUP LLC


TJW4323 TOPJET GRAVITY WALL AIR INLET

Inlet Parts List


FRONT VIEW

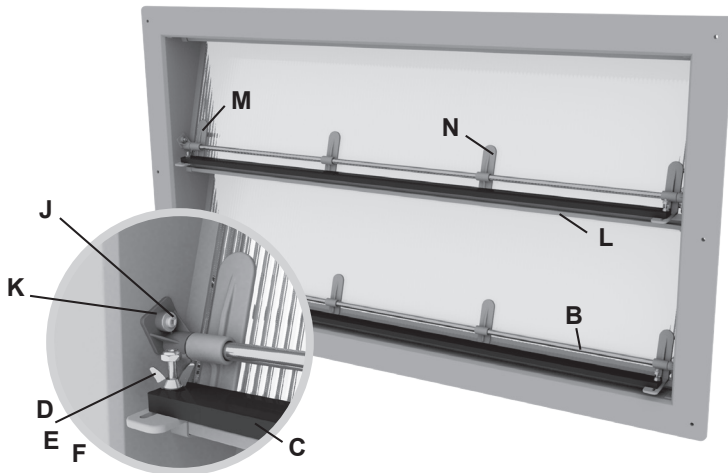

BACK VIEW

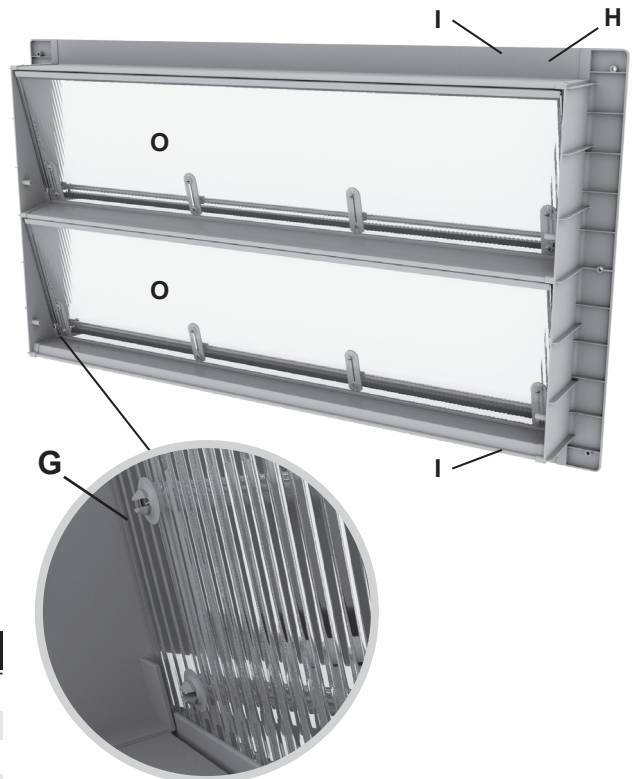

Description	Part No.
A #10-24 x 1" HX Trim MS 18-855	CB1206
B Rod 3/8" V124 41-3/4"	SS2246
C Bar Weight 3/8" x 1" x 40-1/2"	BA2486
D #10-24 x 1-1/4" SS Carriage Bolts	CB1205
E #10-24 SS Lock Nut w/ Nylon Ins	LN1024
F #10-24 SS Wing Nut	WN1024
G Zinc Push Nut 0.05" O.D., 25" I.D.	900200PN
H Plastic Nail	900086CH
I Inlet Frame Profile 42"	900078CH42"
J #6 x 3/4 Screw	600075RN
K Hinge Clip	900082CH
L Extension Profile 42"	900079CH42"
M TJW Large Holder	900083CH
N TJW Small Holder	900084CH
O Twin Wall 41.5" Blade with Channel	900088CH

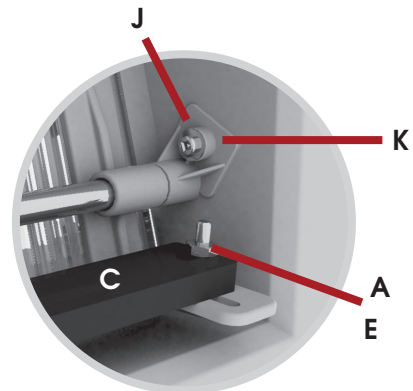

Have technical questions?
Contact Dick Streicher at
1-563-875-6257 or 1-800-553-4102

(563) 875-6257 or 1-800-553-4102

www.doublel.com

www.youtube.com/doublelgroup



DOUBLE L GROUP LLC

TJW4323 TOPJET GRAVITY WALL AIR INLET


Inlet Installation Instructions




Step 1. Push the top, bottom, & center profiles onto one of the endcaps.



Step 2. Install the other endcap.

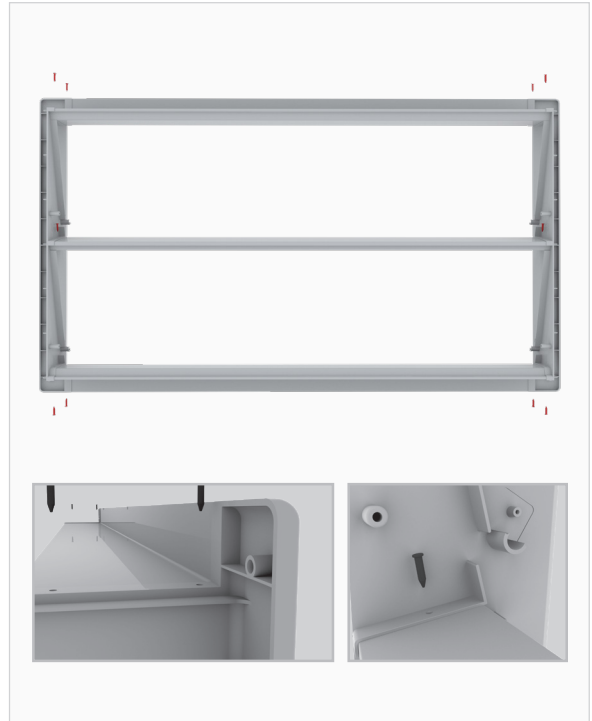


Step 3. Using a rubber mallet, pound the plastic nails into position on four corners and the center profile.

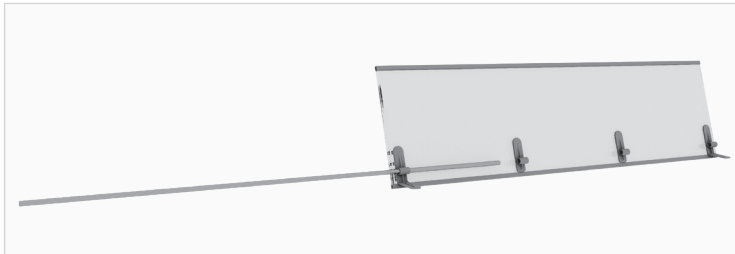

Step 4. Slide 3/8" rod into rod holders on clear louvers.



Step 5. Slide the louver into place, resting the rods onto the pivot holders.

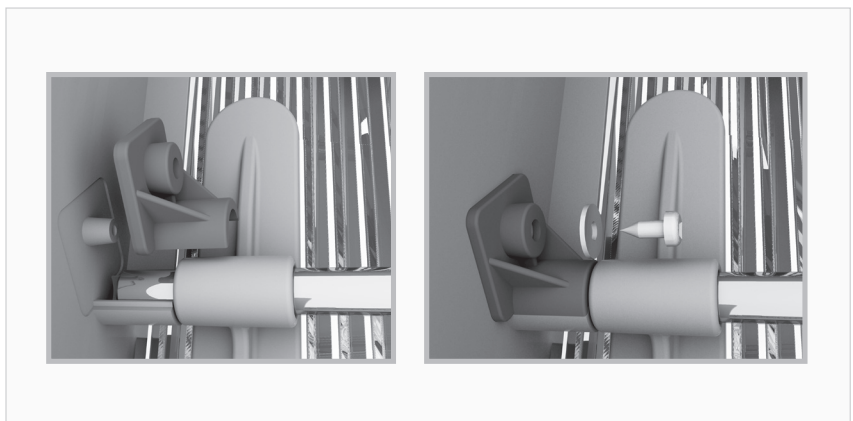


Step 6. Snap the rod hinge clips into place. Using #6 x 3/8 screw, fasten rod hinge clip into place.




DOUBLE L GROUP LLC

TJW4323 TOPJET GRAVITY WALL AIR INLET


Inlet Installation Instructions

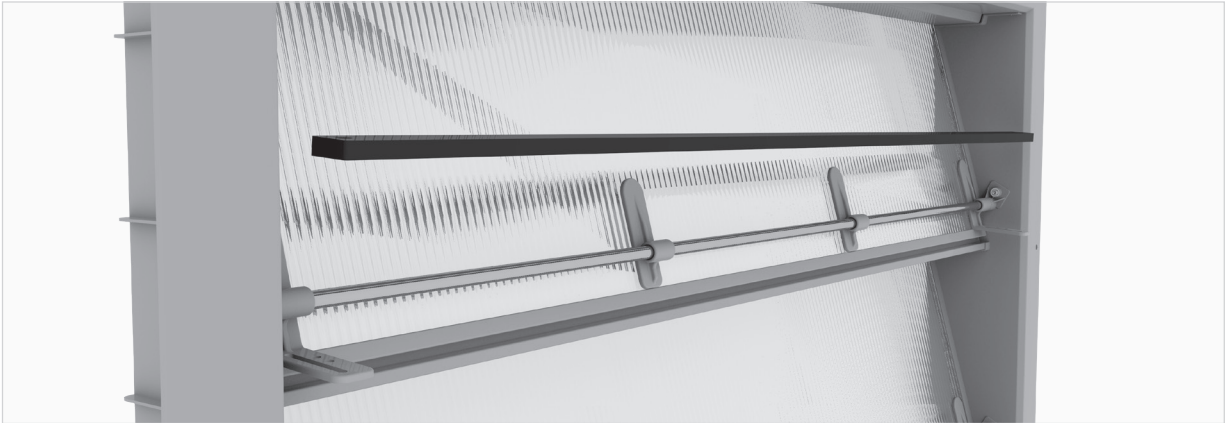


Step 7. Lay the weight bar into place on top of the outer rod holes.

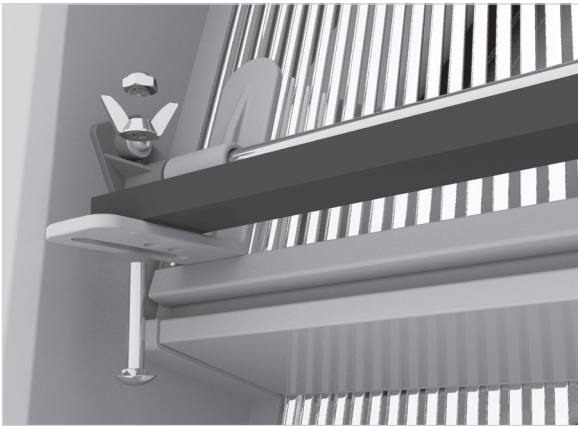

Step 8. Install 1/4" carriage bolts through slotted hole on left side of rod holder and weight bar. Secure with wing nut.

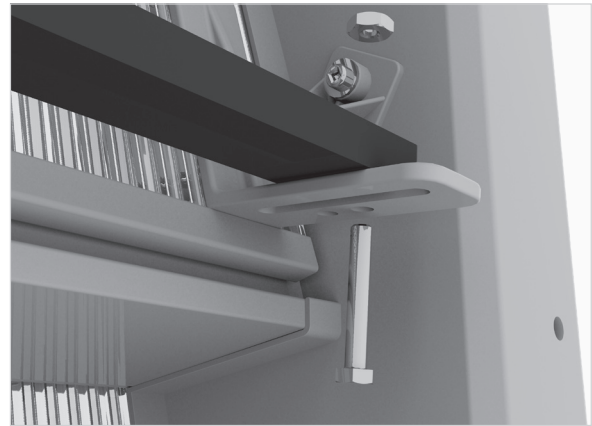

Step 9. Install 1" bolt through outer hole in right rod holder and weight bar. Secure with lock nut.

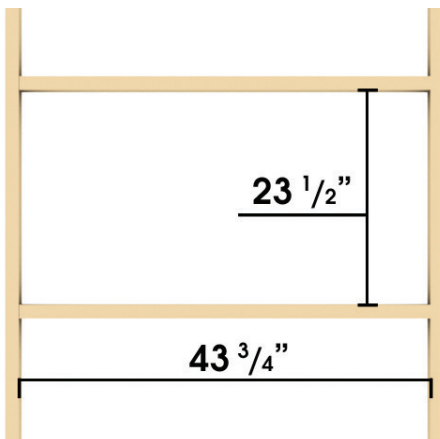

Have technical questions?
Contact Dick Streicher at
1-563-875-6257 or 1-800-553-4102

(563) 875-6257 or 1-800-553-4102

www.doublel.com

www.youtube.com/doublelgroup